

BRAUN

Sommelier

HT 600




多士炉

HT600

www.braunhousehold.com

型号 4118

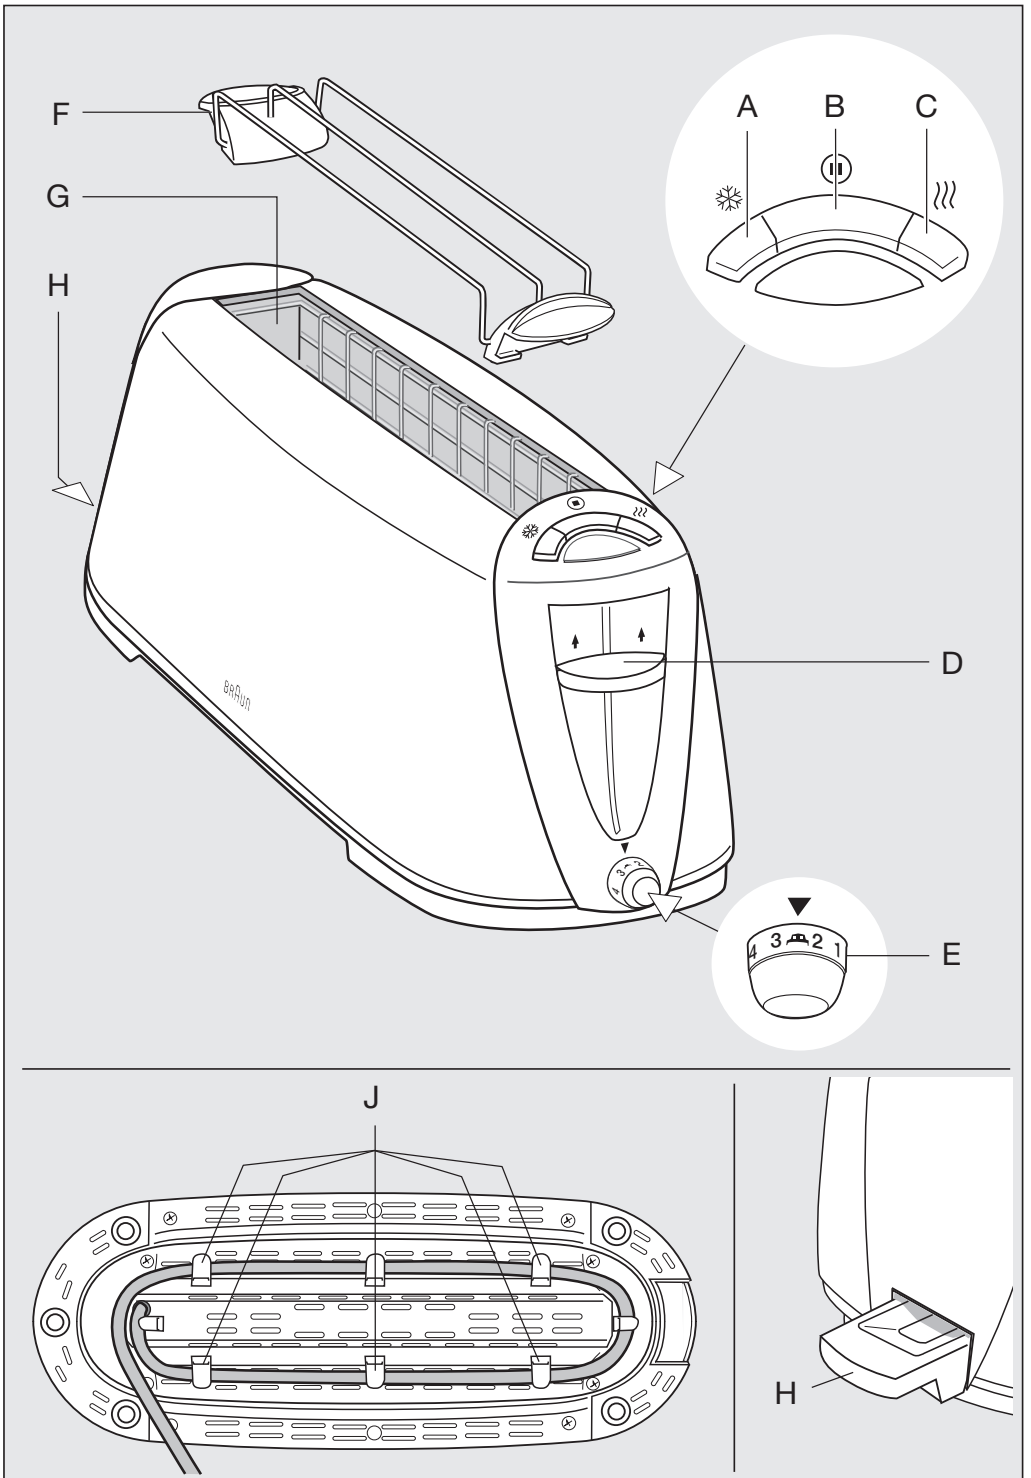

我们的产品设计理念旨在满足质量、功能、设计方面的高标准。我们希望您可以从全新博朗产品中获得全身心的享受。

注意

使用产品前请仔细阅读使用说明书,并请妥善保管。

如果电源线损坏,必须由制造商、服务中心或有专业资质的人员进行更换,以避免危险。

本机不能在外接定时器或独立的遥控控制系统的方式下运行。

该产品不适宜儿童或是在身体、精神上存在缺陷者使用,除非有专人负责照看以保证他们的安全。通常,我们建议您将产品置于儿童触手可及的范围之外。应小心看管儿童以保证他们不会玩弄此产品。

请勿在无人照看的情况下使用该产品。

插入插座前,请核对电源的电压是否符合产品底部所标示的电压。

避免接触灼热内侧表面。切勿将电线接触内侧。

请勿将金属物件置于烤面包机内。

该产品不适宜于烘烤脆皮面包,甜面包干或类似的食物。

切勿覆盖烤面包机槽,或是往槽内插入包有铝箔的食物。

使用时要确保面包屑托盘放置到位。

仅可于竖直状态使用。

面包有可能燃烧,不得在靠近窗帘及其他可燃材料的地方或在窗帘及其他可燃材料的下方使用。

产品在使用过程中可能会发热,尤其是金属部件。

请在冷却后贮存该产品。

博朗电器符合安全适用标准。电器产品维修(包括电线调换)必须在指定授权的服务中心进行。维修失误,或是不合格的维修操作可能给使用者带来意外事故或伤害。

该产品适用于普通家庭用量的加工。

描述

- A 烘焙开关
- B 手动停止开关
- C 加热开关
- D 面包提手
- E 可调节烘烤控制
- F 面包及面包卷烤架
- G 烤面包槽
- H 面包屑托盘
- J 电线储藏格

请于首次使用之前将空置烤面包机调节至4挡并加热2至3次,以去除生产加工造成的异味。

操作

您可使用该产品烘烤所有适宜烤槽大小的面包。

- 确保面包屑托盘(H)固定到位。
- 插入面包,随即拉下提手(D)。
- 使用可调节烘烤控制(E)由1档(浅色)至7档(深棕)选择您所中意的焦脆程度。
- 一旦烘烤至您所选择的焦脆程度,面包会自动上升。
- 您可将提手继续拉升,进一步将面包拉升出烤槽。
- 若需中断烘烤,只需按下手动停止开关(B)。面包便会上升,同时烤面包机将停止运作。
- 若不慎关闭烤面包机,只需简单重新启动。

面包卡住了该怎么办?

若面包卡在烤面包槽(G)中,请拔掉烤面包机电源,待其冷却后,随后使用非金属钝器小心地将卡住的面包取出。

如何烘烤冷冻面包?

如果您想烘烤冷冻的面包,只需插入面包,选择您所中意的焦脆程度(烘烤控制E),拉下提手(D),紧接着按下烘焙开关(A)。

如何加热面包?

如果您希望重新加热已经冷却的面包,只需按下提手(D),随即按下加热开关(C)即可。

面包及面包卷烤架

想要加热食物,但无法将面包插入烤面包槽,您只需使用面包及面包卷烤架即可。烤架仅可用于面包,面包卷。切勿尝试烘烤蛋糕,比萨饼,烘焙罐头,或是整条面包。大型食物容易导致烤面包机内的热量积聚。同样,也请勿将包有铝箔的面包卷或是糕饼卷置于烤架之上。

加热食物只需旋转可调节烘烤控制(E)至面包卷记号位置,并拉下提手(D)。

最大档的烘烤加热效果甚佳,烤架可同时烘烤两个面包卷。

清洁

清洁之前必须拔掉电源并静候电器冷却。切勿使用流水冲洗电器,或将电器浸入水中。

仅可使用湿布擦拭外表面。
请勿使用钢丝绒或擦洗剂，清洁过程中可使用少量餐具洗涤剂。
切勿使用任何溶剂进行清洗，例如酒精，汽油或苯类产品。并定期面包屑托盘 (H) 抽出进行清理擦拭。

产品使用期限到期后请勿将其弃于家用垃圾箱内。产品回收处置可经由博朗服务中心进行或请通过您所在国家的回收站点进行相关处置。



如有更改，恕不另行通知。

保修

我们为产品提供为期两年的保修，保修期从购买日开始计算。

在保修期内对于产品因材料或生产过程引起的各种瑕疵，我们会视情况更换零件或整个产品。

申请保修必须将本产品 and 能够证明购买日期的证据(购货发票)一起交给授权的Braun维修站，本产品附有一张授权的维修站名单。

请确认已将购货发票放置在安全的地方。

上述保修不包括以下内容：

- 由于使用不当而造成的产品损坏(如：使用错误的电流、电压，将产品插入不合适的插座，或者人为损坏等)。
- 正常使用引起的产品老化、磨损、但对产品的使用功能及价值影响不大。
- 按行业惯例定义的易损、易耗件。
- 如果产品经过未经授权的人员的修理，或产品使用了非本公司(Braun)的零件，保修期即终止。
- 非家庭使用(如工业、商业用)引起的损坏。
- 在保修期内提供的服务并不影响保修期按时结束，保修期中替换的零件或整机的保修服务与本产品的保修期同时终止。
- 除非确有法律规定，本公司不对其他任何要求负责。同供货商的销售合同中规定的各项权利不受此保修的影响。

如果需要保修或维修，请与当地的维修站，或就近的维修站联系。

客服热线：800-988-1668 (上海地区)
400 827 1668 (全国地区)



English

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you thoroughly enjoy your new Braun appliance.

Caution

Please read the use instructions carefully and completely before using the appliance.

This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, unless they are given supervision by a person responsible for their safety. In general, we recommend that you keep the appliance out of reach of children. Children should be supervised to ensure that they do not play with the appliance.

Do not use unattended.

Before plugging into a socket, check that your voltage corresponds with the voltage printed on the bottom of the appliance.

Avoid touching hot insides. Never let the cord come in contact with the inside.

Do not put metal objects into the toaster.

This appliance is not suitable for toasting crisp bread, rusk, or similar food.

Never cover the toaster slot, nor insert food covered with foil.

Never use without the crumb tray in place.

Only use in upright position.

Bread may burn. Therefore do not use near or below curtains or other flammable materials.

The appliance will get hot, especially the metal parts. Let it cool down before storing.

Braun electric appliances meet applicable safety standards. Repairs on electric appliances (including cord replacement) must only be carried out by authorized service centres. Faulty, unqualified repair work may cause accidents or injury to the user.

This appliance was constructed to process normal household quantities.

Description

- A Switch for defrosting
- B Manual stop switch
- C Switch for rewarming
- D Bread lift
- E Variable browning control
- F Bread and roll rack
- G Toaster slot
- H Crumb tray
- J Cord storage

Before using for the first time, heat up the empty toaster 2 to 3 times at setting «4». This will remove possible odours caused by manufacturing processes.

Operation

You can toast all sizes of bread which fit the toaster slot.

- Ensure the crumb tray (H) is in place.
- Insert the bread, then push down the lift (D).
- With the variable browning control (E) choose the degree of browning you prefer from «1» (light) to «7» (dark).
- When the selected degree of browning has been reached, the bread will be lifted automatically.
- You can lift the bread further by shifting the lift (D) upwards.
- If you wish to interrupt the toasting, push the manual stop switch (B). The bread will be lifted and the toaster will be turned off.
- If the toaster shuts off unexpectedly, simply start it again.

Jammed bread

If bread is jammed in the toaster slot (G), unplug the toaster, let it cool down and carefully remove the jammed bread with a non-metallic, blunt tool.

Frozen bread

If you wish to toast frozen bread insert the bread, choose the degree of browning you prefer (browning control E), push down the lift (D) and then push the switch for defrosting (A).

Rewarming

If you wish to rewarm toast that has cooled down, push down the lift (D), then push the switch for rewarming (C).

Bread and roll rack

To warm up food which does not fit the toaster slot (G), you can use the bread and roll rack. Use the rack (F) only for bread, rolls and pastries. Do not attempt to use with cakes, pizza, baking tins or whole loaves. Such large foods will cause heat accumulation within the toaster. Also, do not place any rolls etc. on the rack which are wrapped in any kind of foil.

To warm, switch the browning control (E) to the position with the roll symbol and push down the lift (D).

Warming works best when putting max. 2 rolls on the roll rack.

Cleaning

Always unplug the appliance and allow to cool down before cleaning. Never clean the appliance under running water, nor immerse it in water.

Clean the exterior surfaces with a damp cloth only. Do not use steel wool or abrasive cleaners. Small amounts of dishwashing liquids may be used. Never use any solvents such as alcohol, gasoline or benzene. Occasionally pull out and empty the crumb tray (H).

Subject to change without notice

Please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.



De'Longhi-Braun-Household GmbH
Carl-Ulrich-Straße 4
63263 Neu-Isenburg/Germany

2301003IBR/08.13
China/UK