

BRAUN

PowerBlend 9



Type JB901AI

Register your product

www.braunhousehold.com

한국어..... 10

English 14

© Copyright 2023. All rights reserved
De'Longhi Braun Household GmbH
Carl-Ulrich-Straße 4
63263 Neu-Isenburg/Germany








	스무디/Smoothie
	수프/Soup
	다지기/Chop
	얼음 분쇄/Ice crush
	빙과류/Frozen dessert
	스프레드 잼/Spread
	부드럽게/Smooth
	중간/Medium
	거칠게/Coarse
	시작/중지/start/stop

* 추가 구성품 (JB9040에는 미포함) / certain models only




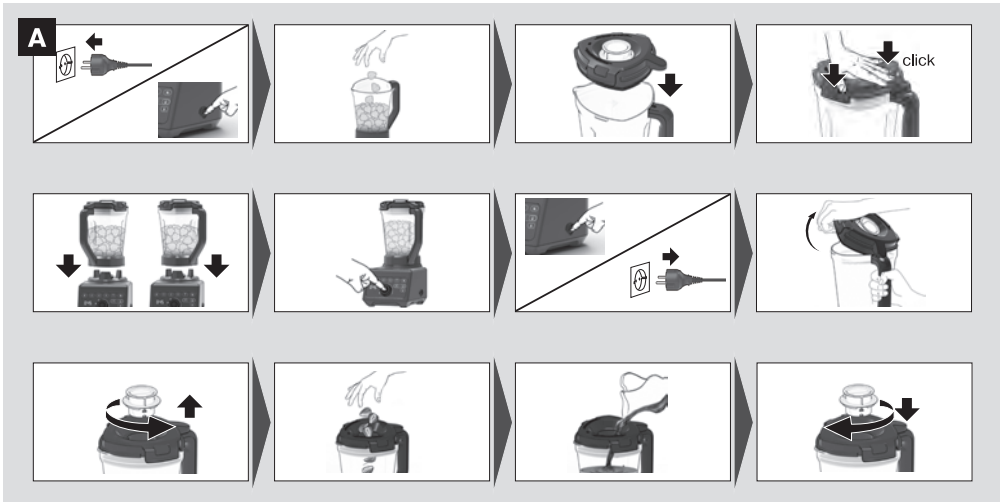


점등/permanent \\\|\\|
 깜빡임/flashing \\\|\\|\\|\\|

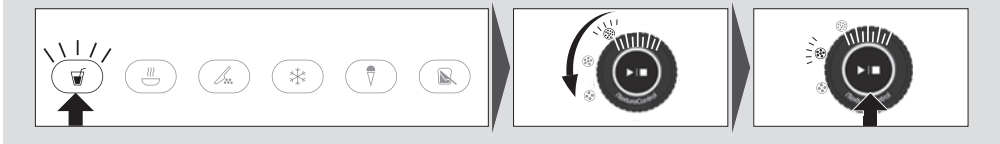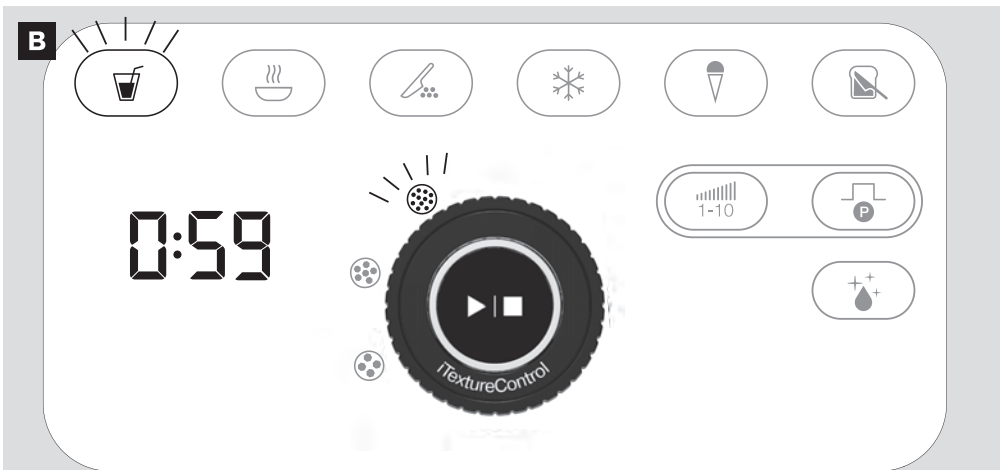


C

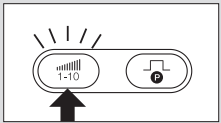

D

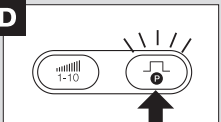

E.a.











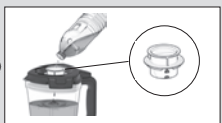


E.b.



F



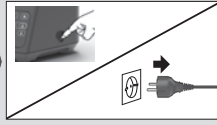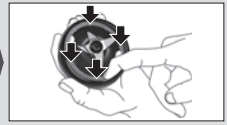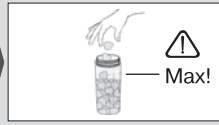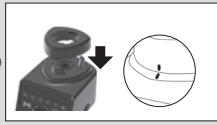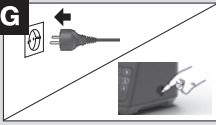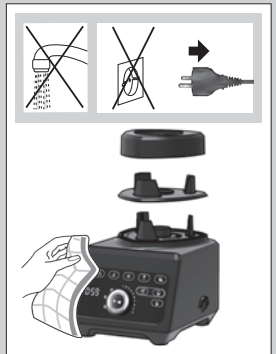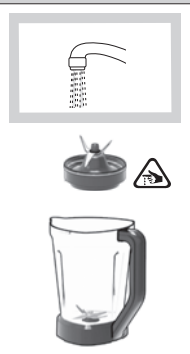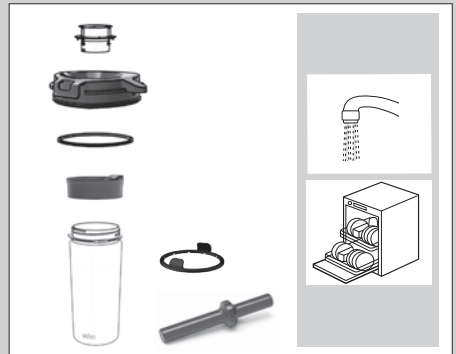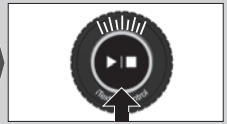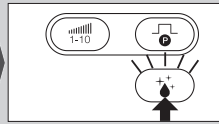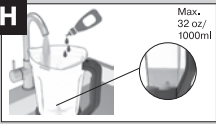




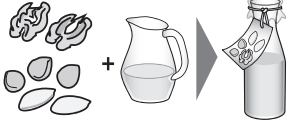











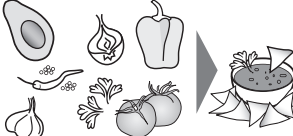


 






G**H**

주의: 일반적인 사용은 가능하나, 고열을 사용하는 경우 변형 혹은 변색이 될 수도 있습니다.















 
















 



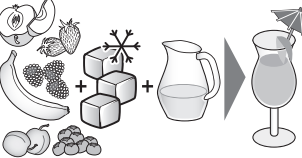

 


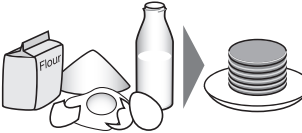

I

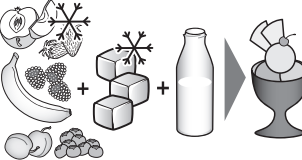



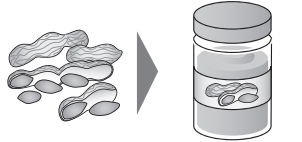


 
 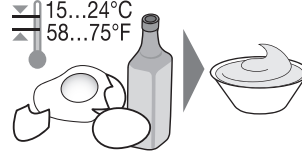



 
	프로그램 Program		 초 sec.	
	2000 ml 		자동 AUTO	
	2000 ml 	2x 	자동 AUTO	
<p>< 25°C > 60°C</p> 	1800 ml 	 (뜨거운 수프 기능)* (hot soup function)*	자동 AUTO	
	1800 ml 		자동 AUTO	
	1000 g 		자동 AUTO	
	600 g 		자동 AUTO	
	250 g 	2x  2x  2x 	자동 AUTO	




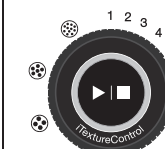


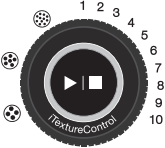



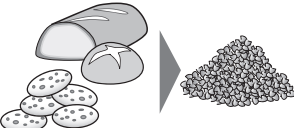
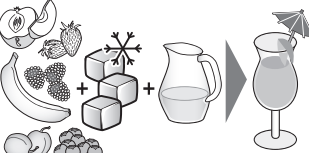


 
*관련 장 참조/*see dedicated chapter



		프로그램 Program		 초 sec.	
	200 g - 400 g		2x  2x  2x 	자동 AUTO	
	600 g		2x  2x  2x 	자동 AUTO	
	12x 		  	자동 AUTO	
	2000 ml		  	자동 AUTO	
	400 g - 800 g		  	자동 AUTO	
	600 g		  	자동 AUTO	
	500 ml		1.) 1 - 3 + 7 2.) 7	60 + 60	
	1800 ml		1 - 10	45 - 60	



		프로그램 Program		 초 sec.	
	500 g - 1000 g		6	10 - 15x	
	15 g - 30 g		10	5 - 10x	
	100 g - 300 g		6	5 - 10x	

  <div data-bbox="288 802 396 890" style="background-color: #ccc; padding: 5px; display: inline-block;"> Max 30° C </div>		프로그램 Program		 초 sec.	
	600 ml max 200 g			자동 AUTO	
	4x			자동 AUTO	
	600 ml			자동 AUTO	
					


한국어

안전 지침 사용 전



장치를 사용하기 전에 관리를 지침을 주의 깊게 읽고 필요할 때 참고하십시오. 모든 포장과 레이블을 제거하고 적절하게 폐기하십시오.

주의

-  칼날이 굉장히 날카롭습니다! 부상을 피하기 위해 칼날을 최대한 주의해서 다루십시오.
- 칼날이 날카로우므로 용기를 비울때나 청소할 때 주의하시기 바랍니다.
- 신체 및 감각 기능에 장애가 있거나 지적 장애가 있는 사람, 경험과 지식이 부족한 사람도 관리 감독하에서나 안전한 기기 사용에 관한 지침을 숙지하고 관련 위험 요소를 이해하고 있는 경우에는 이 기기를 이용할 수 있습니다.
- 어린이가 제품을 갖고 놀게 하면 안 됩니다.
- 어린이가 기기로 장난을 치지 않도록 하십시오.
- 제품 및 전원 코드를 어린이의 손이 닿지 않는 곳에 보관하십시오.
- 전원 코드가 손상된 경우 감전을 방지하기 위해 제조업체, 서비스 대행업체 또는 동등한 자격을 갖춘 사람이 교체해야 합니다.
- 기기를 사용하지 않거나 조립, 분리, 청소 및 보관하기 전에는 항상 전원을 끄고 플러그를 뽑으십시오.
- 푸드 프로세서나 블렌더에 뜨거운 액체를 부을 때 증기 급증으로 기기에서 액체가 분출될 수 있으니 주의해야 합니다.
- 절대로 제품을 물 또는 다른 액체에 담그지 마십시오.
- 주의 사항: 작동을 시작하기 전에 용기 뚜껑이 완전히 닫혔는지 확인하십시오.

- 전원 소켓에 연결하기 전에 전압이 기기 하단에 인쇄된 전압과 일치하는지 확인하십시오.
- 본 제품은 일반 가정용이며 일반 가정의 사용량을 고려하여 설계되었습니다.
- 본 기기를 사용 설명서에 제시된 사용 목적 외 다른 목적으로 사용하지 마십시오. 잘못된 사용은 부상의 원인이 될 수 있습니다.
- 부품을 전자레인지에 넣어 사용하지 마십시오.
- 최초 사용 전에 또는 필요할 경우 관리 및 청소 섹션의 지침에 따라 모든 부품을 깨끗이 청소하십시오.
- 항상 뚜껑 또는 보호대를 설명서에 표시된 대로 놓고 블렌더를 사용하십시오.
- 모터베이스에 연결되어 있는 용기에는 절대 손을 넣지 마십시오. 음식물을 아래로 밀어야 할 경우에는 주걱 등 적절한 도구를 사용하십시오.
- 중요: 모든 포장재(비닐봉지, 폴리스티렌 폼)는 어린이의 손이 닿지 않는 곳에 두십시오.
- 안전관련부품이 의도치않게 재설정되는 위험을 피하기 위해서는 기기를 타이머 등 외부 스위치 장치를 통해 사용하거나 장치에 의해 정기적으로 스위치가 켜지고 꺼지는 회로에 연결해서는 안 됩니다.
- 용기에 내용물이 없는 상태로 장치를 사용하지 마십시오.
- 용기에 음식 또는 액체를 저장하지 마십시오.
- 작동 중에 또는 그 어떤 경우에도 블렌더를 치거나 떨어뜨리지 마십시오.
- 손상을 피하기 위해 용기를 '최대Max' 표시이상으로 채우거나 크기를 키우지 마십시오.

설명

1. 계량 뚜껑
2. 용기
3. Precision Edge칼날
4. 패드
5. iTextureControl다이얼 +  버튼
6. 전원(ON/OFF) 스위치
7. 타이머 표시창
8. 발광 터치 디스플레이
9. 모터 베이스
10. 코드 보관 공간(뒷면)
11. 뚜껑(마개 포함)
12. 누름봉



*Smoothie2Go 블렌딩 세트 구성품
(모델별로 구성품이 다름)

13. *600ml Smoothie2Go 병 및 음료 섭취용 뚜껑
14. *Smoothie2Go 칼날 그룹 및 마개
15. *Smoothie2Go 어댑터

최초 사용 전

블렌더를 처음 사용하기 전에 '관리 및 청소'를 참조하여 모든 부품을 청소합니다.

(A) 용기 사용하기

 
전원을 켜고(6) 용기(2/13)를 조립하면  불이 들어 오고  버튼(5)이 깜빡이며 사용 준비가 됐음을 알립니다.

계량 뚜껑(1)을 제거하면 느린 속도일 때 추가 재료 또는 액체를 넣을 수 있습니다(그림 A).

주의 사항:



- 패드(4) 없이 기기를 작동하지 마십시오.
- 수동 모드를 사용하여 용기에 뜨거운 액체를 넣을 때는 주의하십시오. 속도 1에서 블렌딩을 시작하여 뜨거운 증기와 튀는 액체로 인한 화상을 예방하십시오. 용기에서 뜨거운 액체 재료의 최대 허용 용량은 1,500ml입니다.
- 본체와 용기의 연결 부위는 동작 후에도 뜨거울 수 있으니 손을 대지 마십시오.

(B) 음식 프로그램 및 질감 모드



우선 6가지 자동 음식 프로그램(8) 중 하나를 선택하고 원하는 질감  (5)을 선택하여 원하는 농도로 만듭니다. (5)를 누르면 타이머(7)에 총 블렌딩 시간과 카운트 다운(그림 B)이 표시됩니다. 카운트 다운이 끝나면 프로그램이 자동 중단됩니다. 프로그램을 미리 중단하려면 아무 버튼이나 누르십시오.



상세한 작동 지시 사항은 표 1을 참조하십시오.

일시정지


프로그램을 일시정지하려면  (5)를 누르십시오. 타이머 (7) 및 다이얼 (5)가 깜빡이며 일시정지 모드임을 나타냅니다. 프로그램을 계속하려면  를 한 번 더 누르십시오.

'뜨거운 수프' 기능

프로그램  + 질감  을 사용할 때 용기 내의 칼날이 차가운 재료를 뜨겁게 만들기까지 약 6분이 걸립니다.

주의 사항: 이 기능을 사용할 때는 뜨거운 재료 (25°C 이상)를 넣지 마십시오. 뜨겁게 조리된 재료를 사용하여 수프를 준비할 때는  /  질감을 사용하십시오.

(C) 수동 모드

수동모드를 선택하고 다이얼을 돌려서 속도를 선택합니다. 블렌딩을 시작하거나 중단하려면  (5) 버튼을 누르십시오. 타이머(7)에 동작 시간이 나타납니다. (그림 C). 상세한 작동 지시 사항은 표 1을 참조하십시오.

(D) 분쇄 모드

분쇄 모드는 덩어리가 큰 음식을 잘게 부수거나 자르거나 음식의 질감을 제어하는 데 사용됩니다. 원하는 속도를 선택하여 분쇄하십시오.

재료의 상태를 보며 버튼  을 눌러 분쇄하세요. (그림 D).

(E) 계량 뚜껑 사용하기

작동 도중 계량 뚜껑(1)을 사용하여 구멍으로 오일을 천천히 흘려넣어 소스 및 드레싱을 유화시키거나(그림 E.a) 소량의 액체를 쉽게 투입하십시오(그림 E.b).



(F) 누르는 막대 사용하기

블렌딩 시 섞이지 않은 재료를 용기 벽에서 밀어내리고 두꺼운 혼합물을 칼날 쪽으로 누를 때 사용합니다. 제공되는 막대(12)는 계량 뚜껑(1)의 구멍에 넣어 사용하면 칼날에 닿지 않습니다(그림 F).

참고: 덮개를 반드시 장착한뒤에 사용해야 합니다. 그렇지 않으면 매우 위험합니다.

(G) Smoothie2Go 병으로 블렌딩하기 (별도 구매 제품)


Smoothie2Go 블렌딩 세트(13,14,15)는 모델에 따른 구성품으로 관련문의는 고객센터로 문의하실 수 있습니다. (일부 국가에서는 구매가 불가할 수 있습니다)

참고: Smoothie2Go 병을 사용할 때는 프로그램  및  을 사용할 수 있습니다. Smoothie2Go 병을 뜨거운 음식 또는 탄산 음료 블렌딩에 사용하지 마십시오. 손상을 피하려면 용기에 내용물을 'Max' 표시 이상으로 채우지 마십시오.

단백질 셰이크 또는 알코올 음료를 준비할 때는 400ml 이상 채우지 마십시오.

상세한 작동 지시 사항은 표 II를 참조하십시오.

자동 꺼짐

용기(2)를 결합한 기기는 수동 모드에서 작동 시간 6분이 지나면 자동으로 블렌딩을 멈추며, Smoothie2Go 병(13)을 결합한 기기는 2분 뒤에 자동으로 멈춥니다. 작동을 다시 시작하려면  (5)를 누르십시오.

대기

속도나 모드를 선택하지 않으면 기기는 2분 뒤 자동으로 대기 모드에 들어가며 모든 표시등이 꺼집니다. 타이머(7)만 흐려지며 ---:--를 표시합니다. 블렌더를 다시 사용하려면 아무 버튼을 누르거나 다이얼(5)을 움직이십시오.

열 모터 보호

블렌더에는 모터의 과열을 방지하는 열 보호 장치가 장착되어 있습니다. 모터가 작동 도중 멈춘다면 블렌더 전원을 뽑고 최소 30분 정도 지난 뒤에 다시 블렌딩을 시작하십시오.


최상의 결과를 얻기 위해

- 블렌딩 도중 작동이 멈춘다면 효율적으로 블렌드하기에는 액체가 부족할 수 있습니다. 액체를 조금 더 넣거


나 누르는 막대를 넣고 천천히 저어 주십시오.

- 소량의 음식을 준비할 때는 느린 속도를 사용하십시오.
- 견과류, 치즈, 고기를 자를 때는 원하는 결과를 얻기 위해 여러번 동작해야 합니다.
- 채소를 자를 때는 더 잘 순환되도록 소량의 물을 넣는 것이 좋습니다. 완료한 뒤에 잘린 재료에서 문제 해결 가이드 물기를 제거하십시오.
- 용기에는 다음 순서로 내용물을 넣으십시오. 액체, 마른 재료, 녹색 채소, 부드러운 재료, 단단하거나 냉동된 재료, 얼음 Smoothie2Go 병에는 역순으로 재료를 넣으십시오.
- 수동 모드로 블렌딩하는 경우 항상 속도 1에서 시작해서 서서히 원하는 속도로 높이십시오.
- 단단한 재료(파마산 치즈, 초콜릿, 고기 등)를 자를 때는 작은 크기(3cm)로 자르십시오.

(H) 관리 및 청소


사용 기간을 늘리기 위해  프로그램을 사용하여 용기를 청소하는 것이 좋습니다. 프로그램은 순환을 마치면 자동으로 정지됩니다.

용기(2)에 물을 반 정도 채우고 세제를 몇 방울 넣은 뒤 다음 단계를 따릅니다(그림 H).

Smoothie2Go 병(13)에도 같은 절차를 적용합니다. 가장 좋은 결과를 위해서는 사용 후 즉시  프로그램을 수행하십시오. 프로그램이 완료된 뒤에 용기를 물로 깨끗하게 행구고 말리십시오.

세척팁

매달 1회 식초 용액을 사용하여 음식물 찌꺼기와 얼룩을 제거하는 철저한 세척을 수행하는 것이 좋습니다.

용기에 식초 500ml(5% 산성)를 물 500ml(1:1 비율)와 섞어 넣고  프로그램을 시작하십시오. 최소 5분 동안 그대로 둡니다. 철저한 세척 후에는 용기를 잘 행구고 말리십시오.

문제 해결 가이드

문제	잠재적 원인	해결 방법
블렌더가 작동하지 않음	전원이 공급되지 않음	집의 퓨즈/회로 차단기를 확인합니다. 제품 과열 방지 장치가 작동하는 경우 30분 식힌 후에 사용 가능합니다. 위 방법으로 해결되지 않으면 Braun 고객 서비스 센터로 문의하십시오.
	용기 또는 Smoothie2Go가 제대로 연결되지 않음. 타이머에 세 개의 선(---)이 표시됨	연결 부위의 정확한 위치를 확인합니다.
액체가 용기 밖으로 튀	덮개가 제대로 장착되지 않았거나, 느슨하거나, 파손됨	덮개가 제대로 장착됐는지 확인합니다.
	용기 뚜껑 또는 계량 뚜껑이 제대로 닫히지 않음	뚜껑과 계량 뚜껑을 닫습니다.
	용기에 내용물이 지나치게 많음	작동 표에 있는 권장 최대 용량을 따릅니다.
모터 베이스가 조리대 위에서 움직임	고무 발판이 깨끗하지 않음	고무 발판을 청소하고 흡착력이 좋은지 확인합니다.
타이머 화면에 오류 코드가 표시됨 (OL)	과부하 방지	내용물의 양을 줄여주십시오. (G 참조)
타이머 화면에 오류 코드가 표시됨 (E01, E02, E03, E04, E05)	E01 과부하 방지	블렌더를 끄고 용기를 모터 유닛에서 제거한 뒤 칼날이 막혀 있는지 확인합니다. 권장 속도, 최대 용량, 작동 표의 모드를 따릅니다.
	E02/E03 열 보호가 작동하여 유닛의 과부하를 방지함	블렌더를 끄고 플러그를 뽑은 뒤 30분 기다렸다가 작동을 재개합니다. 오류 코드가 사라지지 않는 경우 Braun 고객 서비스 센터로 문의하십시오.
	E04/E05	블렌더를 꺾다가 다시 컵니다. 오류 코드가 사라지지 않는 경우 Braun 고객 서비스 센터로 문의하십시오.

보증 및 서비스

본 제품은 구매일로부터 1년간 품질을 보증합니다. 드롱기코리아(주)는 품목별 소비자 분쟁 해결기준 (공정거래 위원회 고시)에 따라서 제품에 대한 보증을 실시합니다.

브라운 홈페이지:
<http://www.braunhousehold.co.kr>

브라운 주방가전:
 위니아 에이드 서비스 센터 소모품 및 A/S 문의
 080-647-0000

Safety Instructions

Before use



Please read the user instructions carefully and completely before using the appliance and retain for future reference. Remove all packaging and labels and dispose them appropriately.

Caution




- The blades are very sharp! To avoid injuries, please handle blades with utmost care.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- This appliance shall not be used by children.
- Children shall be kept away from the appliance and its main cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always switch off and unplug the appliance when it is left unattended and before assembling, disassembling, cleaning and storing.

- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- Never immerse the unit in water or other liquids.
- Caution: Ensure the complete lid is placed on the jug before starting into operation.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance.
- This appliance is designed for household use only and for processing normal household quantities.
- Do not use the appliance for any purpose other than the intended use described in the user manual. Any misuse may cause potential injury.
- Do not use any part in the microwave.
- Please clean all parts before first use or as required, following the instructions in the Care and Cleaning section.
- Always operate the blender with the lid or the guard in position as indicated in the instructions.
- Never put your hand in jar when it is placed on the base unit. If food needs to be pushed down use suitable tool e.g. spatula.
- Important: Keep all packaging (plastic bags, polystyrene foam) away from children.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance

must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

- Do not use the device without any load in the jug.
- Do not store food or liquids in the jug.
- Avoid bumping or dropping the blender when in operation or at any time.
- To avoid damage, do not fill the containers past the “max” marking or scale.

Description

1. Measuring cap
2. Jug
3. PrecisionEdge blade
4. Centering pad
5. iTextureControl dial +  button
6. On/Off switch
7. Timer
8. Illuminated touch display
9. Motor base
10. Cord storage (on back side)
11. Lid incl. gasket
12. Tamper



Smoothie2Go blending set consisting of:

13. 600 ml Smoothie2Go bottle incl. drinking lid
14. Smoothie2Go blade group incl. gasket
15. Smoothie2Go adapter

Before First Use

Clean all parts before using the blender for the first time – refer to „Care and Cleaning“.

(A) Using the Jug


When switched on (6) and any container (2/13) is assembled,  lights up and the  button (5) is flashing, indicating the appliance is ready to use.

By removing the measuring cap (1), you can add additional ingredients or liquids at low speed (Fig. A).

Caution:



- Never attempt to operate the appliance without the centering pad (4)
- Be careful when blending hot liquids in the jug using the manual mode. Start blending on speed 1 to avoid possible burns due to escaping steam and splashes. The maximum allowed amount of hot liquid ingredients in the jug is 1500 ml.
- The coupling seat may be hot after running – do not touch.

(B) Automatic Food Programs & Texture Modes



First, select one of the 6 automatic food programs (8) and then select your desired texture (5) to deliver your preferred consistency. Once you press  (5), the timer (7) shows the total blending time and counts down (Fig. B). The program stops automatically when the countdown ends. To stop the program in advance, press any button.


For detailed processing instructions refer to table I.

Pause


To pause the program press  (5). The timer (7) and the dial (5) start flashing indicating the pause mode. To continue the program press  again.

„Hot Soup“ Function

When using the program  + texture  the blades in the jug reach speeds fast enough to bring cold ingredients to steaming hot in about 6 minutes.

Caution: Do not insert hot ingredients (warmer than 25 °C) when using this function. When preparing soups with hot pre-cooked ingredients use  texture.


(C) Manual Mode

To start or stop blending, press the  (5) button. The timer (7) counts up (Fig. C).

For detailed processing instructions refer to table I.

(D) Pulse Mode

The pulse mode can be used to break apart larger pieces of food or to control the texture of food when chopping. Pulse at desired speed.

Duration depends on how long you press the  button (Fig. D).

(E) Using the Double Function Measuring Cap

During operation use the measuring cap (1) to slowly add oil through the dripping hole to emulsify sauces and dressings (Fig. E.a) or easily add small amounts of liquids (Fig. E.b).



(F) Using the Tamper

It helps to push unmixed ingredients down from the jug wall and to bring thick mixtures into the blades while blending. The supplied tamper (12) will not touch the blade when used through the opening of the measuring cap (1) (Fig. F).

Note: It must be used only when the main part of the lid is in place.

(G) Blending with the Smoothie2Go Bottle (optionally available)

The Smoothie2Go blending set (13, 14, 15) can be purchased in stores, through the Braun Household website, or by calling Customer Service.


Note: When using the Smoothie2Go bottle the programs  and  are available for use. The Smoothie2Go bottle must not be used to blend hot foods or carbonated liquids. To

avoid damage, do not fill the container past the “max” marking.

When preparing protein shakes or drinks with alcohol, do not fill beyond max. 400 ml.

For detailed processing instructions refer to table II.

Auto Off

The appliance assembled with the jug (2) stops blending automatically after 6 minutes processing time in manual mode and assembled with the Smoothie2Go bottle (13) after 2 minutes. To re-start operation, press  (5).

Stand-By

If no speed or mode is selected the appliance enters into stand-by mode automatically after 2 minutes and all indicator lights are switched off, only the timer (7) is dimmed and shows „-:-:-“. To re-activate the blender press any button or move the dial (5).

Thermal Motor Protection

The blender is equipped with a thermal protector which protects the motor from overheating. If the motor shuts down during operation, unplug the blender and let it cool down for a minimum of 30 minutes before continuing blending.


For Best Results

- If blending action stops during blending there may be not enough liquid to blend efficiently. Add some more liquid or insert the tamper and stir slowly.
- For preparing small amounts of food use a low speed level.
- When chopping nuts, cheese and meat we recommend running the selected program/texture twice to achieve desired results.
- When chopping vegetables, we recommend adding a small amount of water to improve the circulation. After finishing, strain your chopped ingredients.
- Fill the jug in the following order: Liquids, dry goods, leafy greens, soft ingredients,

hard or frozen ingredients, ice cubes. Fill the ingredients in the reverse order into the Smoothie2Go bottle.


- If blending in manual mode, always start on speed 1 and slowly increase to the desired speed.
- When chopping solid ingredients (such as parmesan, chocolate or meat) cut them up into small pieces (3 cm).

(H) Care and Cleaning

We recommend cleaning the jug by using the  program to prolong its lifetime. The program will automatically stop once it completes the cycle.


Fill the jug (2) halfway with water, add a few drops of dishwashing soap and follow the steps as described (Fig. H).

The same procedure applies for the Smoothie2Go bottle (13).

For best results, run the  program immediately after use. Make sure to thoroughly rinse and air-dry the jug after completion of the program.

Deep Cleaning

We recommend to perform a deep cleaning of the jug on a monthly basis using a vinegar solution to remove food residues and stains.

Prepare the vinegar solution in the jug : dilute 500 ml of vinegar (5% acid) in 500 ml of water (1:1 ratio) and start the  program. Allow the mixture to stand in the jug for maximum 5 minutes. Rinse the jug well after each deep cleaning and allow it to air dry.

Warranty and Service

For detailed information see separate warranty and service leaflet or visit www.braunhousehold.com.

Troubleshooting Guide

Problem	Potential causes	Solution
Blender does not operate	No power supply	Check the fuse/circuit breaker in your home. If none of the above works, contact Braun Customer Service
	Jug or Smoothie2Go attachment is not attached properly. Timer shows three dashes (- - -)	Check the correct position of the attachment
Liquid is splashing out of the jug	Gasket is not mounted properly, loose, or even torn	Ensure that gasket is mounted properly
	Jug lid or measuring cap are not closed properly	Close the lid and measuring cap
	Jug is overfilled	Follow the maximum quantity recommendation in the processing table
Motor base is moving on the countertop	Rubber feet are not clean	Clean the rubber feet to ensure a good grip
„OL“ appears on the timer display	Overload protection Smoothie2Go	Reduce the filling amount (refer to chapter G).

Error code is shown on the Timer Display (E01,E02,E03,E04,E05)	E01 Overload protection	Turn the blender off, remove the container from the motor unit and check if the blade is blocked. Follow the recommended speed, max. filling capacity or mode in the processing table.
	E02/E03 The thermal protection is activated to protect the drive unit from overheating	Turn the blender off, unplug and wait at least 30 minutes before resuming operation. If the error code does not disappear contact Braun Customer Service
	E04/E05	Turn the blender off and on again. If the error code does not disappear contact Braun Customer Service

