

BRAUN

PurShine




Type WK102AI
型号 WK102AI


Register your product
www.braunhousehold.com/register

Water Kettle
电热水壶
WK1500 WH


© Copyright 2022. All rights reserved
De'Longhi Braun Household GmbH
Carl-Ulrich-Straße 4
63263 Neu-Isenburg/Germany

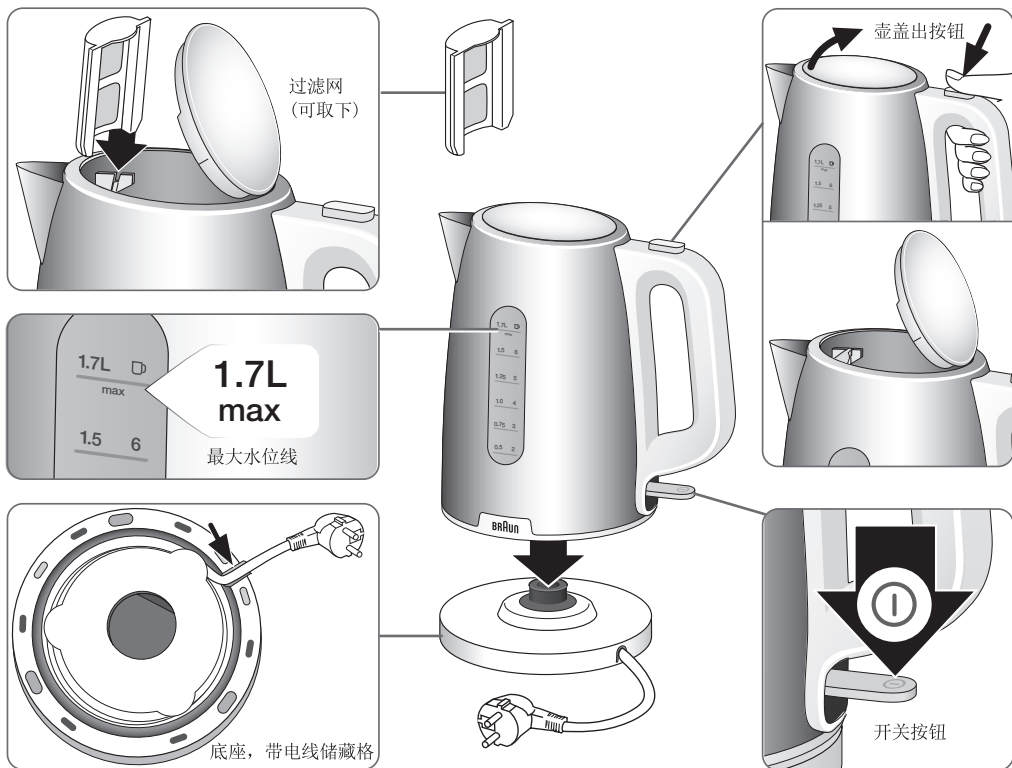



A First use 首次使用前

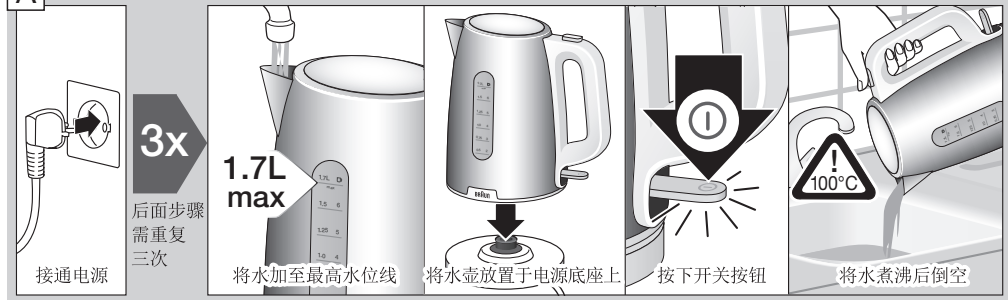





B Usage 用途

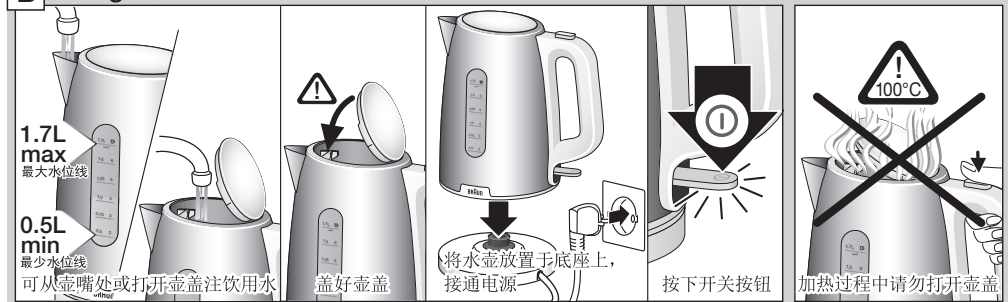




C Auto-Off Options 自动断电功能

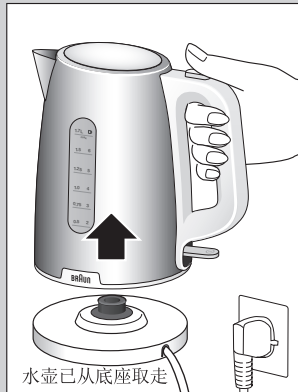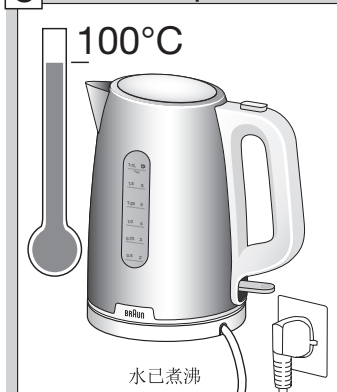

D Descaling 除垢

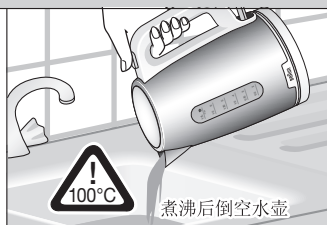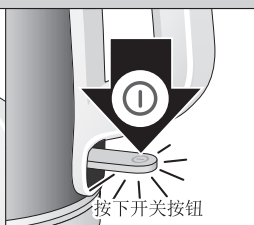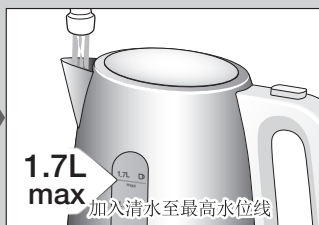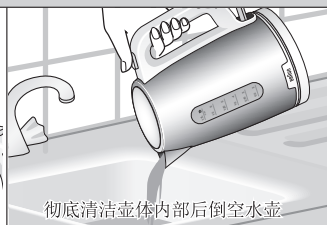

E Care & Cleaning 维护和清洗

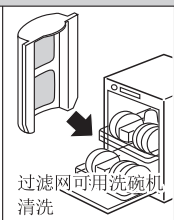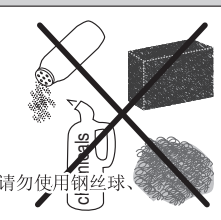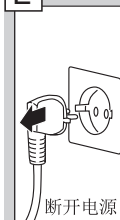

English – Safety Precautions

Before use

Please read the user instructions carefully and completely before using the appliance and retain for future reference. Remove all packaging and labels and dispose them appropriately.

Caution

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- Children younger than 8 years shall be kept away from the appliance and its mains cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The kettle is only to be used with the stand provided.
- If the kettle is overfilled, boiling water may be ejected.
- Never immerse the unit in water or other liquids.
- This appliance is designed for household use only and for processing normal household quantities.
- Do not use the appliance for any purpose other than the intended use described in this user manual. Any misuse may cause potential injury.
- Avoid spillage on the connector
- Please clean all parts before first use or as required, following the instructions in the Care and Cleaning section.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance.
- Only use the kettle to heat water.
- Only operate the kettle on a dry, flat and fixed surface.
- Never let the cord hang down from the worktop. The cord length may be reduced by winding it up with the cord storage facility.
- The base, the kettle or the cord must never get in contact with hot surfaces (e. g. stove plates).
- In case the empty kettle is switched on accidentally, the overheating protection will cut it off automatically. In this case, allow the kettle 10 minutes to cool down before filling it with water.
- Do not open the lid while water is boiling.
- During operation, the kettle will get hot and is subject to residual heat after use. Therefore only use the handle to carry it. Always hold the kettle in an upright position, to avoid boiling water comes out.
- Make sure not to operate too many other electric appliances when using the kettle.
- Socket fuse at least: 16 A
- Caution: Do not operate the kettle on an inclined plane.

- Do not operate the kettle unless the element is fully immersed.
- Do not move while the kettle is switched on.

Please do not dispose the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.



使用前

使用本产品前，请仔细阅读使用说明书，并妥善保管。开箱时，请将本产品从纸箱内取出并去除多余的包装材料。

注意

- 本产品不适宜8岁以下儿童及身体或精神上有缺陷或缺乏使用经验和知识的人群使用，除非专人负责照看或指导以保证他们的安全。
- 请勿让儿童把玩本产品。
- 8岁以下儿童请在有专人负责照看下对产品进行清洗和维护。
- 请勿让8岁以下儿童接触本产品及其电源线。
- 电源线损坏时，为了避免危险，请务必由制造商、代理商或经授权的专业人员更换。
- 本产品必须与所提供的电源底座配套使用。
- 如果本产品注水太满，沸水可能喷出。
- 请勿将本产品浸入水或其他液体中。
- 本产品仅限家用，适用于正常家庭用水量。
- 请勿将本产品用于说明书描述以外的其他用途，任何错误使用都可能造成潜在危害。
- 请避免将水溢出至电源底座与壶体连接轴处。
- 初次使用前请清洗所有部件，之后按需要清洗，具体清洗方法参照《维护和清洗》部分。
- 通电前，请确保电源电压与产品底部标注的电压一致。
- 本产品只可用于加热水。
- 请在干燥、平坦以及稳固表面上使用本产品。
- 请勿使电源线从桌面上垂下来。如果电源线太长可以将其绕在电源线储藏格内。
- 底座、电热水壶或电源线都不能接触热的表面（如烤炉金属盘架）。
- 若不慎在水壶没水的状态下，启动开关加热，其内部设置的过热保护装置将自动切断水壶电源。在此情况下，请在注水前静候10分钟，使水壶充分冷却。
- 请勿在水沸腾时打开壶盖。
- 加热过程中，壶体会变得非常烫手。此时切勿触碰壶体外壳，提起电热水壶时一定要握住它的手柄。为避免开水溢出，请将水壶保持竖直状态。
- 请确保在使用本产品同时不会过多使用其他电器产品。
- 插座保险丝最低：16安
- 注意：切勿在斜面上使用操作本产品。
- 请勿在壶体与电源底座未完全安装到位的情况下使用本产品。
- 加热过程中请勿移动本产品。

使用寿命结束后，请勿将本产品与生活垃圾一起处理。您可将本产品送至国内博朗维修中心或合适的收集点进行处理。



保修和服务

有关详细信息，请参阅保修卡及售后服务地址卡或访问www.braunhousehold.com。

设计规格和使用说明书如有修改，恕不另行通知。



★若有任何需求请与下述地址联系：

☆德龙电器(上海)有限公司

地址：上海市普陀区中山北路3553号2101-2116室

电话：021 3135 8858 传真：021 3135 8262

客户热线：400 827 1668 邮编：200062

网址：www.braunhousehold.com

名称和产品中有害物质的含量

Name and content of hazardous substances in products

组件 名称 Components Name	有害物质 Hazardous substances					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr (VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
塑料外壳 和底盘 Plastic enclosure and chassis	○	○	○	○	○	○
印刷电路板 组装 Printed Circuit Board Assembly	X	○	○	○	○	○
电机、阀门 Motors, valves	○	○	○	○	○	○
电缆和电线 Cable and wiring	○	○	○	○	○	○
金属零件 Metal parts	○	○	○	○	○	○

本表格依据SJ/T 11364 的规定编制。This table is prepared in accordance with the provisions of SJ/T 11364.

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

○：The content of such hazardous substance in all homogeneous material of such components is below the limit required by GB/T 26572.

X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。主要是由于受技术发展水平限制，暂时无法实现替代或减量化，但这部分零部件本身不直接与食物接触，正常使用条件下不会对使用者造成任何健康影响。我们的产品均通过食品安全监测，可安心使用。

X：The content of such hazardous substance in a certain homogeneous material of such components is beyond the limit required by GB/T 26572, mainly due to the level of technical development situation, temporarily unable to achieve replacement or reduction.

The above cited parts marked with “X” are related to components non in contact with the food.

All parts of the appliance in direct contact with the food are safe under normal conditions of use.

