

BRAUN

PowerBlend 1



Type JB101AI




Register your product
www.braunhousehold.com/register

Jug Blender



한국어 9

English 12









© Copyright 2022. All rights reserved
De'Longhi Braun Household GmbH
Carl-Ulrich-Straße 4
63263 Neu-Isenburg/Germany

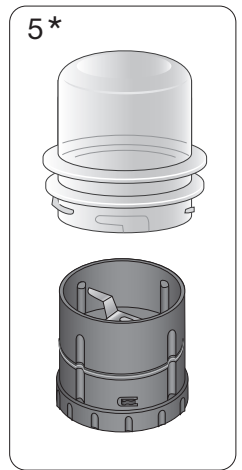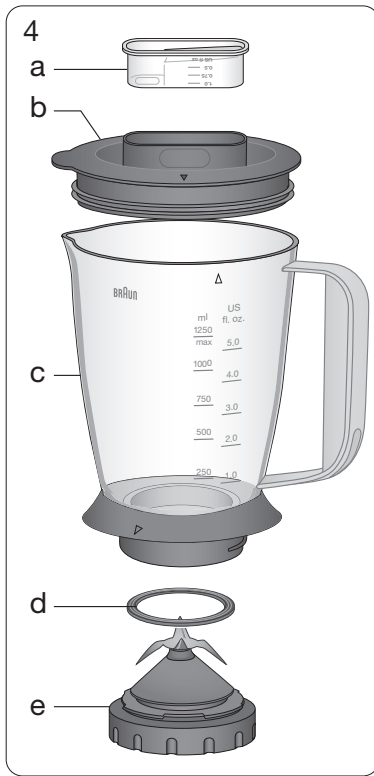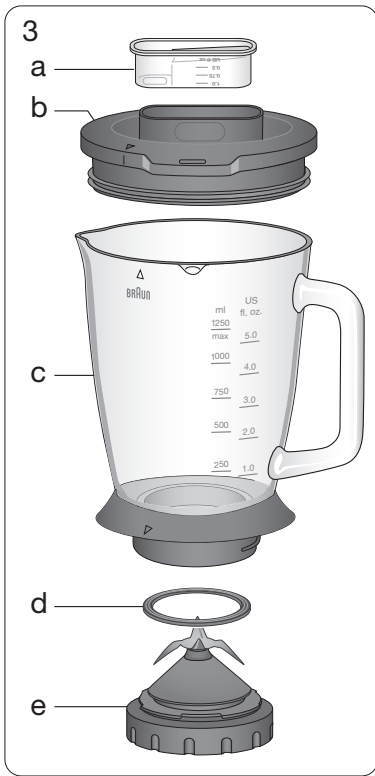

*일부 모델만 해당

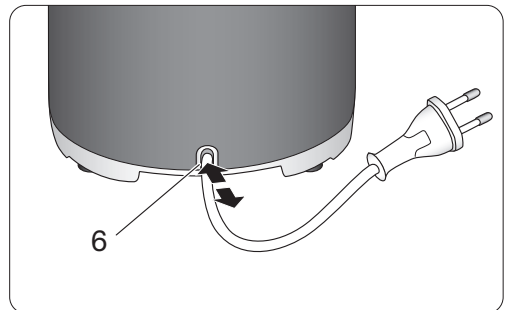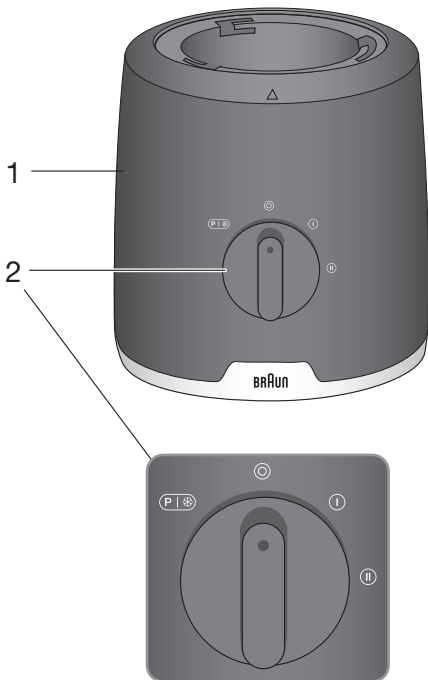


A

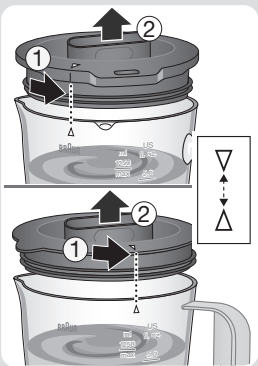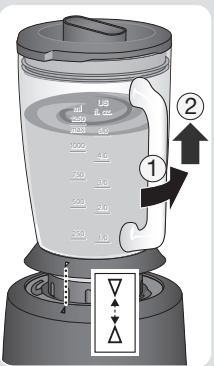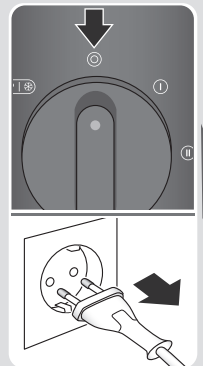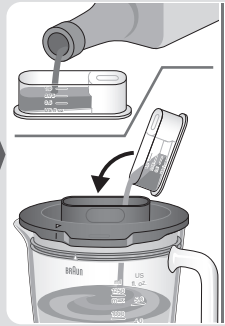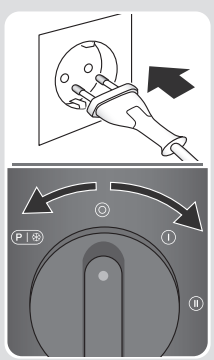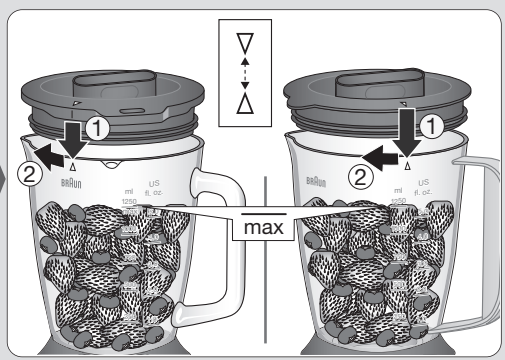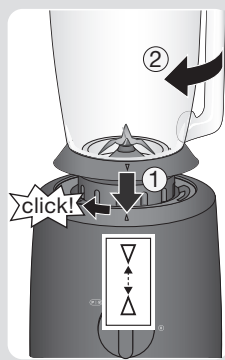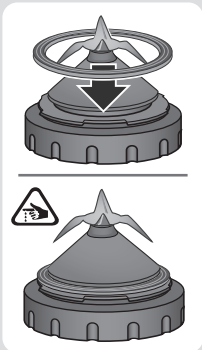

I



최대









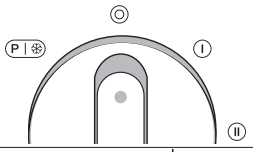


속도

초









B

다지기 사용방법

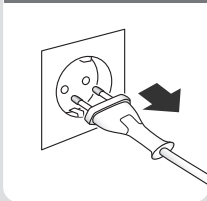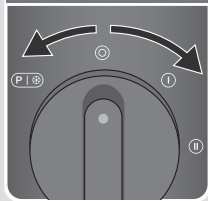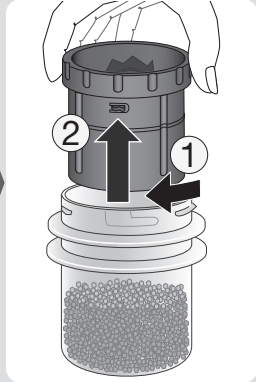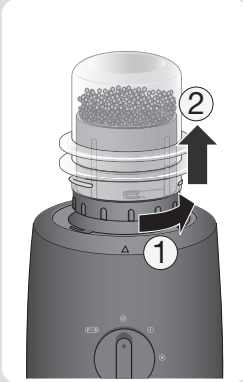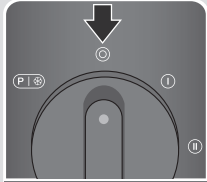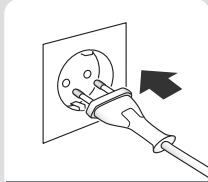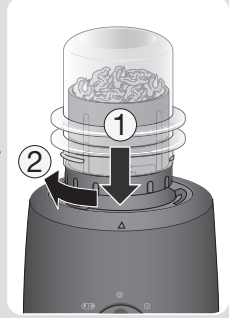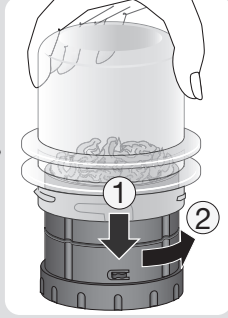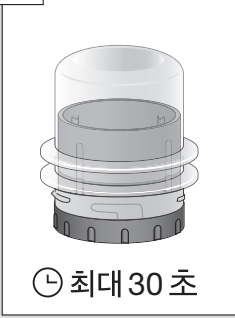

<p>II</p>							


C

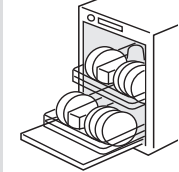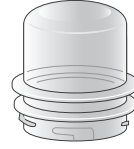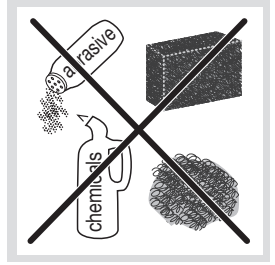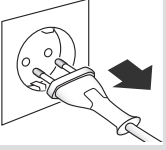

사용전

기기 사용 전에 사용 설명서를 꼼꼼하게 읽으시고 나중에 찾아볼 수 있도록 잘 보관 바랍니다. 모든 포장과 라벨은 제거한 후 적절하게 폐기하십시오.

주의

-  칼날이 매우 날카롭습니다. 칼날을 다룰 때 다치지 않도록 조심해서 다루시기 바랍니다.
- 예리한 칼날을 다루거나, 용기를 비우거나, 세척할 때 조심하십시오.
- 신체 및 감각 기능에 장애가 있거나 지적장애가 있는 사람, 경험과 지식이 부족한 사람은 관리 감독을 하거나 안전한 기기사용에 관해 설명해주는 사람이 있고 기기사용과 관련된 위험을 숙지한 경우에 본기기를 사용할 수 있습니다.
- 어린이가 기기를 갖고 놀게 하면 안 됩니다.
- 이 기기는 어린이가 사용해서는 안 됩니다.
- 기기와 전원 코드를 어린이의 손이 닿지 않는 곳에 두십시오.
- 전원 코드가 손상된 경우에는 제조사, 서비스 센터 또는 자격을 갖춘 사람을 통해 교체하여 위험을 막아야 합니다.
- 기기를 사용하지 않거나, 기기를 조립, 분해, 세척시 반드시 전원을 끄고 전원 코드를 분리하십시오.
- 뜨거운 액체를 블렌더에 부을 때는 갑작스런 증기 발생으로 기기 밖으로 튈 수 있으므로 조심하십시오.
- 절대로 제품을 물 또는 다른 액체에 담그지 마십시오.
- 주의: 기기 뚜껑을 완전히 닫은 후에 사용해야 합니다.
- 콘센트 전압이 기기 하단에 인쇄된 전압과 같은지 확인하고 콘센트에 꽂으십시오.
- 본 제품은 일반 가정용이며 일반 가정의 사용량을 고려하여 설계되었습니다.
- 본 기기를 사용 설명서에 기재된 용도 이외의 목적으로 사용하지 마십시오. 잘못 사용할 경우 상해를 입을 수 있습니다.
- 어떤 부품도 전차라인지에 넣고 돌리지 마십시오.

- 처음 사용할 때 또는 세척이 필요할 때 '관리 및 청소' 부분을 참고하여 모든 부품을 세척하십시오.
- 블렌더를 사용할 때는 반드시 뚜껑을 닫고 설명서에 명시된 위치에 용기 및 뚜껑을 끼운 상태로 작동해야 합니다.
- 장착한 용기 안에 손을 넣으면 절대 안 됩니다. 위로 올라온 내용물은 긴 주걱 등을 사용해 밑으로 긁어 내립니다.**
- 중요: 모든 포장(비닐 봉지, 스티로폼)은 어린이의 손이 닿지 않는 곳으로 치우십시오.
- 과열 차단 기능의 재작동으로 인한 위험이 발생하지 않도록 타이머 같은 외부 스위칭 장치를 사용하여 전원을 공급하거나 전기를 자주 켜다 켜는 회로에 기기를 연결하지 마십시오.
- 용기안에 내용물이 없는 상태로 기기를 작동하면 안 됩니다.
- 음식물이나 액체를 용기에 보관하지 마십시오.
- 블렌더를 떨어뜨리지 마십시오.
- 용기의 «max» 표시를 초과하여 내용물을 채울 경우 넘쳐서 제품 손상이 발생할 수 있습니다.
- 식기 세척기의 사용 열온도에 따라 플라스틱 부품의 변형이 있을 수 있으니 주의 하십시오.

명칭

- 본체
- 속도 조절 스위치
- 유리 용기 (*JB1050 해당)
 - 계량 뚜껑
 - 뚜껑
 - 용기
 - 고무링
 - 칼날
- 플라스틱 용기(*JB1000 해당)
 - 계량 뚜껑
 - 뚜껑
 - 용기
 - 고무링
 - 칼날
- 다지기 용기 (*JB1015 해당)
- 코드 보관 공간

처음 사용하기 전에

블렌더를 처음 사용할 때는 먼저 모든 부품을 세척하십시오(«관리 및 청소» 참조).

(A) 용기

주의: 70°C 이상의 뜨거운 재료를 용기에 넣지 마십시오. 다음 용도 사용에 적합합니다.

- 소스, 과일 주스, 수프, 스무디, 액체 블렌딩
- 부드러운 재료 믹싱(마요네즈, 팬케이크 반죽)
- 익힌 재료로 푸레 만들기(이유식)
자세한 가공 방법은 표 I를 참조하십시오.

자세한 사용 방법은 표 I를 참조하십시오.

용기의 최대 작동 시간은 한 번에 90초입니다. 모터에 무리가 되는 부하가 높은 내용물을 가공할 때는 한번에 오래 작동하지 마시고 모터를 식혔다가 다시 작동하십시오. 모터 손상의 원인이 됩니다.

이 블렌더는 모터의 과열을 방지하는 모터 보호 장치가 장착되어 있습니다. 작동 스위치가 off 위치일 때 모터가 정지할 경우에는 플러그를 뽑고 30분 동안 식힌 후에 다시사용하십시오.

(B) 다지기 용기

채소, 단단한 치즈, 양파, 허브,살고기, 견과를 잘게 자르는 용도에 적합합니다. 자세한 가공 방법은 표 II를 참조하십시오.

초퍼 부착물을 사용해 팬케이크 드레싱 또는 스프레드잼을 만들 수 있습니다. 씨를 제거한 프룬 30g을 초퍼에 넣고 2초 동안 작동합니다.

펄스 모드 / 얼음 분쇄

Ⓟ 펄스 모드를 사용해 커다란 조각을 잘게 부수거나, 얼음을 갈거나, 음식물의 질감을 조절할 수 있습니다. 스위치를 펄스 위치에 두는 시간만큼 작동합니다.

6개 이상의 얼음은 사용하지 않습니다. 일반적인 가정용 냉장고 얼음으로 사용해 주시고 6개 이하로 사용해야 합니다. 용기에 직접적인 충격을 주어 용기가 파손 될 수 있습니다.

최상의 결과를 얻기 위해

- 큰 재료는 조각내서 사용하십시오.
- 재료가 잘 갈리지 않을 때는 물/액체를 넣어주면 잘 갈립니다.
- 소량의 음식물은 저속으로 사용하십시오.
- 마요네즈를 만들 때는 계량 컵과 뚜껑 사이의 구멍으로 오일을 넣을 수 있습니다.
- 부드럽고 끈적한 음식물은 처음 몇 초는 I속도로 시작한 후 작동 속도를 II로 바꿉니다.

(C) 관리 및 청소

- 세척 전에 전원 코드를 분리 합니다.
- 본체를 물이나 액체에 절대로 담그거나 잠기지 마십시오.
- 사용하지 않을 때는 전원 코드를 분리한 후 보관 하십시오.

자세한 내용은 그림C를 참조하십시오.

보증 및 서비스

본 제품은 구매일로부터 1년간 품질을 보증합니다. 드롱기코리아(주)는 품목별 소비자 분쟁 해결기준 (공정거래 위원회 고시)에 따라서 제품에 대한 보증을 실시합니다.

브라운 홈페이지:

<http://www.braunhousehold.co.kr>

브라운 주방가전:

위니아 에이드 서비스 센터 소모품 및 A/S 문의
080-647-0000

문제 해결 가이드


문제	가능한 원인	해결 방법
블렌더가 작동하지 않음	용기가 제대로 장착되지 않았음	용기와 뚜껑 위치를 확인하십시오. 용기의 우측 또는 좌측 손잡이를 잡고 본체에 장착합니다. 그런 다음 용기를 돌려 완전히 고정시킵니다.
	모터 과열 방지 장치가 작동되었음	블렌더를 끄고, 플러그를 뽑은 다음 30분 이상 지난 후에 다시 사용하십시오.
용기가 썸	고무링을 끼우지 않았거나 잘못 끼웠음 고무링의 변형으로 인해 기능이 떨어짐	고무링의 장착 방법 (그림 A) 확인하십시오. 구매 방법은 고객센터에 문의해 주십시오.
	칼날이 용기에 완전히 끼워지지 않았음	칼날을 끝까지 돌려 용기에 확실하게 끼우십시오.
액체가 용기 밖으로 튕	용기에 내용물을 너무 많이 넣었음	최대 권장 용량을 확인하십시오.
	선택한 속도가 너무 빠름	권장 속도를 확인하십시오.

English

Before use

Please read the user instructions carefully and completely before using the appliance and retain for future reference. Remove all packaging and labels and dispose them appropriately.

Caution

-  The blades are very sharp! To avoid injuries, please handle blades with utmost care.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- This appliance shall not be used by children.
- Children shall be kept away from the appliance and its main cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always switch off and unplug the appliance when it is left unattended and before assembling, disassembling, cleaning and storing.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- Never immerse the unit in water or other liquids.
- Caution: Ensure the complete lid is placed on the jug before starting into operation.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance.
- This appliance is designed for household use only and for processing normal household quantities.
- Do not use the appliance for any purpose other than the intended use described in the user manual. Any misuse may cause potential injury.
- Do not use any part in the microwave.
- Please clean all parts before first use or as required, following the instructions in the «Care and Cleaning» section.
- Always operate the blender with the lid or the guard in position as indicated in the instructions.
- Never put your hand in jar when it is placed on the base unit. If food needs to be pushed down use suitable tool e.g. spatula.
- Important: Keep all packaging (plastic bags, polystyrene foam) away from children.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Do not use the device without any load in the jug.
- Do not store food or liquids in any container.
- Avoid bumping or dropping the blender when in operation or at any time.
- To avoid damage, do not fill the containers past the «max» marking or scale.

Parts and Accessories

- 1 Base unit
- 2 Rotary switch
- 3 Glass jug
 - a. measuring cap
 - b. lid
 - c. jug
 - d. gasket
 - e. blade group
- 4 Plastic jug
 - a. measuring cap
 - b. lid
 - c. jug
 - d. gasket
 - e. blade group
- 5 Chopper attachment
- 6 Cord storage compartment

Before First Use

Clean all parts before using the blender for the first time – refer to «Care and Cleaning».

(A) Jug

Caution: Do not blend ingredients hotter than 70°C in the jug.

The jug is perfectly suited for

- blending smoothies, liquids, sauces, fruit juices and soups
- mixing soft ingredients (mayonnaise, pancake batter)
- pureeing cooked ingredients (baby food)

For detailed processing instructions refer to table I.

Maximum operation time for the jug is 90 seconds at a time. When processing heavy loads let it cool down to room temperature for next operation.

The blender is equipped with a motor protection which protects the motor from overheating. If the motor shuts down during the performance switch off, unplug and let it cool down for 30 minutes before continuing blending.

(B) Chopper Attachment

The chopper attachment is perfectly suited for chopping vegetables, hard cheese, onions, herbs, meat and nuts. For detailed processing instructions refer to table II.

The chopper attachment can also be used to make a pancake stuffing or spread. Fill the chopper with 30 g pitted prunes and pulse for 2 seconds.

Pulse Mode / Ice Crush

The pulse mode can be used to break apart larger pieces of food, to crush ice or to control the texture of food when chopping. Duration depends on how long you hold the switch (P | ✱) in pulse position.

For Best Results

- When mixing solid ingredients, cut them up into small pieces.
- If blending action is not sufficient during blending there may be not enough liquid to blend efficiently.
- For preparing small amounts of foodstuff use a low speed level.
- When preparing mayonnaise, oil can be added through the openings between the measuring cap and the lid.
- For soft or pasty foodstuff start on speed I for the first seconds then change to speed II for further processing.

(C) Care and Cleaning

- Disconnect power before cleaning.
- Do not immerse the base unit in water or any other liquid.

For detailed information refer to section C.

Troubleshooting guide

Problem	Potential Cause	Solution
Blender does not operate	Jug is not attached properly	Check the position of the jug and the lid. Place the jug with the handle on the right or left side on the motor body. Then rotate it until it is fully locked.
	Motor overheating protection is activated	Turn the blender off, unplug and wait at least 30 minutes before continuing blending
Jug is leaking	Gasket is not inserted or not inserted correctly.	Check if gasket is mounted properly and in the right order
	Blade assembly is not tightly screwed to the jug	Screw the blade assembly correctly to the jug
Liquid splashing out of the jug	Jug is overfilled	Check maximum quantity recommendation
	Lid/measuring cap is not or not inserted correctly.	Check if lid/measuring cap is mounted properly

